

Symptoms

- Low spinner RPM
- Noise from spinner flow control valve, when starting the spinners
- Noise from spinner flow control valve, all the time
- Requires high oil flow from tractor to reach desired RPM
- Hydraulic oil heating
- Spinners lose RPM under load

Notes

- Locate the spinner flow control valve at the front of the machine
- Rotate the flow control lever to 10 (full flow to the spinners)
- If the valve is equipped with a pressure relief valve on the bottom face
 - Remove the relief valve cap
 - Use a hex key to screw the internal adjuster clockwise, until it stops
 - Replace the cap

